


Drill Template (PN 84331262)

1. Cut out template below along solid lines.
2. Line up template per the directions and mark the drill location on the driver side body.*
3. Remove the template.
4. Drill a small pilot hole at the marked location.
5. Enlarge the hole to 3/8" using a 3/8" drill.

*Reverse template for use on the passenger side.

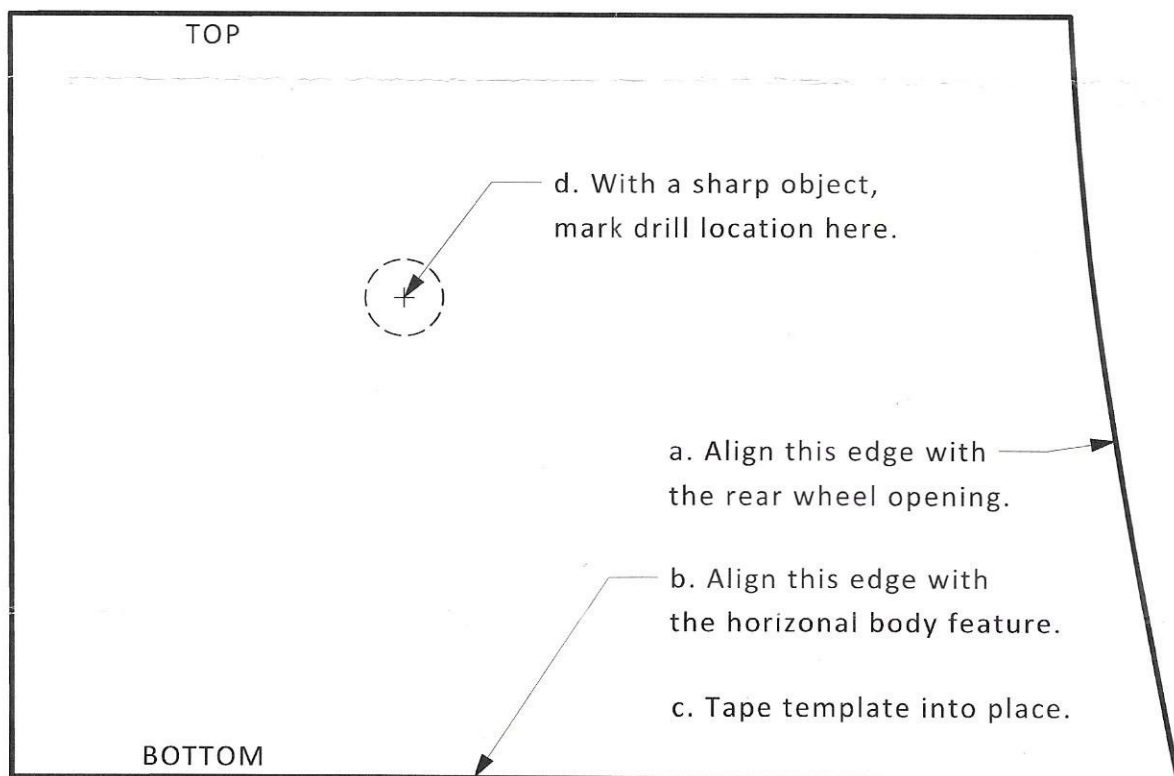

Scale Check
50mm